



RETOUCHING JOINERY

While washing it, check if the coating film has suffered any accidental damage. Coating film scratches or breaks can easily be repaired by simply retouching, to avoid further damage to the wooden structure caused by the infiltration of water.

PROCEDURE

To be performed only on the part that requires a repair. Identify the damaged parts and clean the surface with OECE **986-21**. Then use a brush to apply OECE **41F-0011/40** or **41F-0012/40** water-based clear coating or OECE **41F-9401/40**, **41F-9011/40**, **41F-3901/40** pigmented coating of the desired colour.

Once dry, make sure that the damage has been effectively repaired and, if necessary, apply a second coat.

If the surface damage cannot be repaired with minor work, we recommend that you follow the instructions for re-coating.

HOW OFTEN

When the coating film needs it.

MATERIALS TO BE USED

Animal/synthetic combination bristle brush, waterborne transparent topcoat OECE **41F-00XX/40** or waterborne pigmented topcoat OECE **41F-9401/40**, **41F-9011/40**, **41F-3901/40**, in the desired colour.